



# CUSTOM SOLUTIONS

Cuts Through Multiple Coats of Old Finish— Removes Tough Build-Ups

Fast Action Reduces Floor Downtime

Strips Deep— Helps Eliminate Re-Application

### Equipment List

- ✓ Wet floor signs
- ✓ Single disc floor machine or autoscrubber
- ✓ Wet vacuum
- ✓ Black, brown or high productivity pads
- ✓ Looped-end cotton mop
- ✓ Mop bucket with wringer, dust mop
- ✓ Edge tool
- ✓ Scraper
- ✓ Walk-off towel
- ✓ Squeegee

Available in sizes: 1, 2.5 and 55 gallon containers.

Wear safety equipment recommended on MSDS, place wet floor signs and read all directions and cautions prior to beginning work.



# BRUTE FORCE


## PROFESSIONAL STRIPPER

### Professional Recommendations

- Schedule stripping your floor based on traffic wear and desired appearance
- **Do not** buff a bare dry floor before coating—you may release asbestos into the air
- **Do not** strip linoleum or rubber tiles with this product; it will remove binding oils and embrittle the floor
- **Do not** use at stronger dilutions than recommended—the stripping solution will dry too quickly on the floor, possibly re-hardening and causing removal problems
- **Always** follow label directions for rinsing

### Specifications


Appearance	Clear, thin liquid
Odor	Sassafras
Density (lbs/gal)	.850
pH (Conc./±/0.5)	13.5
Flashpoint	178°F
Stability (40°-120°F)	OK in closed containers
Freeze/thaw stability	OK, 3 cycles with thawing and agitation
Shelf life	1 year minimum
D.O.T. hazard class/ID No.	Corrosive Liquid/UN3266

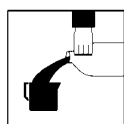


Dilute **Brute Force** with warm water 5:1 for no-scrub bare floor stripping (25 oz. per gallon), 10:1 for bare floor stripping with machine scrubbing (13 oz. per gallon). Apply to surface liberally.



Allow 5-10 minutes for stripper to work.

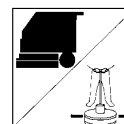

Do not allow solution to dry. If preferred, use a stripping pad on an autoscrubber or single disk floor machine. Scrub thoroughly to remove all old coatings.

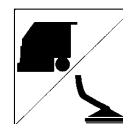

Check edges and baseboards for buildup. Remove with doodlebug or pad center. Scrub and pick up with autoscrubber or wet vac. Damp mop lightly with cool water to remove all residues. Allow floor to dry before recoating.